## mart Installation Instructions

## VersiControl Smart System Plus - J1939

Part#: 2300X-KKKK-00-01


## **Safety Instructions**

- · Disconnect power before installing, adding or changing any component.
- · To avoid a hazard to children, account for all parts and destroy all packing materials.
- · Do not install any luminaire assembly closer than 6" from any combustible materials.
- · Positive (+) outputs require a fuse if the attached wire leads are not rated to handle the max current.
- · This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
  - This device may not cause harmful interference
  - This device must accept any interferences received, including interference that may cause undesired operation


## **Mating Connectors**

J1939	Power Wires	RGB Wires	RGBW Wires	Addressable Wires
DTM04-6P	DTP06-2S	DT04-4P	DT04-6P	DT04-3P


WIRING DIAGRAMS: Follow the wiring diagram below to wire the module to your system. Note: Maximum replacement fuse size is 20 amps.

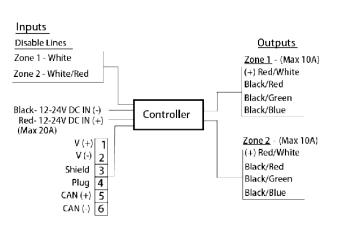


23002-RGB-00-01 - Standard Two-Zone RGB

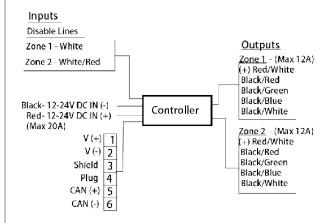

23002-RGBW-00-01 - Standard Two Zone RGBW

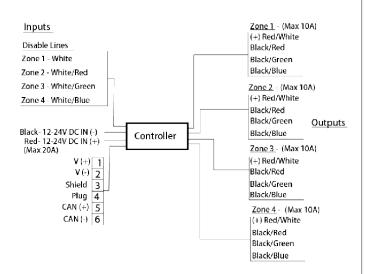


23004-RGB-00-01 - Standard Four Zone RGB

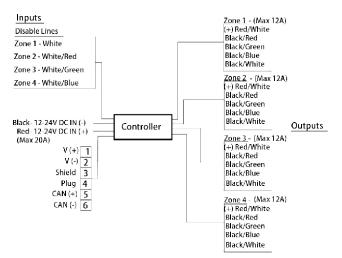


23004-RGBW-00-01 - Standard Four Zone RGBW




3030 Corporate Grove Dr. Hudsonville, MI 49426 Phone: 616.396.1355 itc-us.com For warranty information please visit www.itc-us.com/warranty-return-policy Rev A · 07/16/24

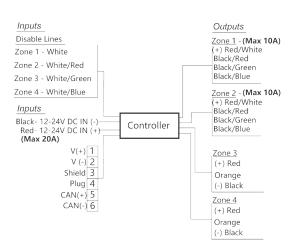


23022-RGB-00-01 - Two Standard RGB/Two Addressable

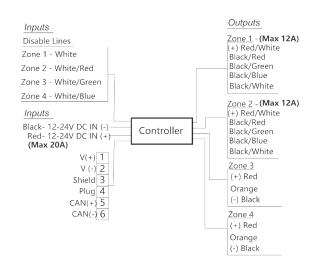


23022-RGBW-00-01 - Two Standard RGBW/Two Addressable

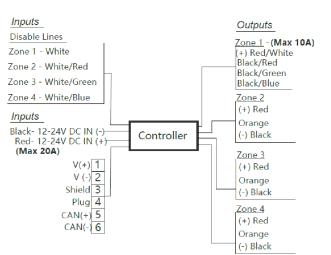

23031-RGB-00-01 - One Standard RGB/Three Addressable

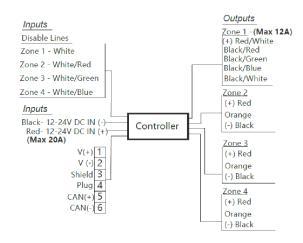

23031-RGBW-00-01 - One Standard RGBW/Three Addressable

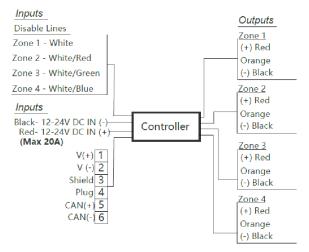

23004-RGBW-00-01 - Four Addressable Zones



For warranty information please visit www.itc-us.com/warranty-return-policy Rev A  $\cdot$  07/16/24