





Anya/Ava Courtesy Light

INSTALLATION INSTRUCTIONS

Part#: 696R1/696R3

PARTS/TOOLS NEEDED:

			
Courtesy Light	Two #8 Pan Head Screws	Butt Splice Connectors (not provided)	Power Drill (not provided)

IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive (+) input.

- 1.** Determine the installation location for your light and drill a ½" hole. Pull the units wiring through and wire using the diagram below right.

Screw in the housing using the provided screws.




- 3.** Push bezel in place.



- 2.** To install the light in the housing, line up the tab on the light with the gap in the housing¹ and press down on the opposite corner until it snaps in place.²



- 4.** Wire the light following the wiring diagram below.

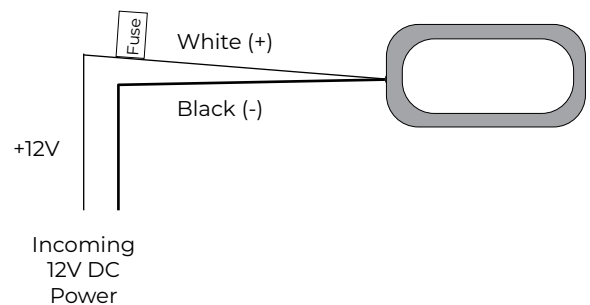

3030 Corporate Grove Dr.
Hudsonville, MI 49426
Phone: 616.396.1355
itc-us.com

For warranty information please visit www.itc-us.com/warranty-return-policy
DOC #: 710-00178 · Rev C · 06/20/24